

End Pin

In violin making the end pin is a button made of wood which is fixed at the lower block. The end pin's task is holding the tailpiece hanger of the tailpiece.

[back](#)